


OPERATION MANUAL (Simple)

WIRED REMOTE CONTROLLER (for air conditioner)

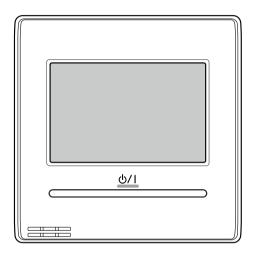

MODEL: UTY-RNRT

Before using this product, read these instructions thoroughly and keep this manual for future reference.



PART No. 9373329848-01

FUJITSU GENERAL LIMITED

OPERATION MANUAL

PART No. 9373329848-01 WIRED REMOTE CONTROLLER

Contents

INT	RODUCTION	
	FETY PRECAUTIONS1	
■ Naı	me of parts2	
1 M	ONITOR	
1-1	Monitor 2	
1-1-1	Monitor mode screen2	
2 C	ONTROL	
2-1	On and Off	
2-2	Operation Settings3	
2-2-1	Set the Operation Mode3	
2-2-2	Set the Temperature	
2-2-3	Set the Fan Speed	
2-3	Zone Operation3	
2-3-1	Zone Select	
2-3-2 2-3-3	Zone Individual Operation	
2-3-4	Set the Priority Sensor	
2-3-5	Zone Group Operation4	
3 SE	TTING	
3-1	Select the Setting Items 4	
3-2	Comfort 4	
3-3	Air Flow Direction Setting 5	
3-3-1	VT (Up/down) Air Flow Direction5	
3-3-2	HZ (Left/right) Air Flow Direction5	
3-4	Timer Setting 5	
3-4-1	On Timer 5	
3-4-2	Off Timer	
3-4-3	Auto Off Timer	
3-5	Special Setting7	
3-5-1	Economy 7	

For administrators

This manual indicates the procedures of the basic operations.

We provide the full version of the operation manual on the web

Access from the QR code below as needed.



www.fujitsu-general.com/global/support/

"QR Code" is a trademark or registered trademark of DENSO WAVE INCORPORATED.

INTRODUCTION

■ SAFETY PRECAUTIONS

 The "SAFETY PRECAUTIONS" indicated in the manual contain important information pertaining to your safety.
 Be sure to observe them.



This mark indicates which, this product contains button or coin cell battery. Hazardous if swallowed.

THIS PRODUCT CONTAINS A RECHARGEABLE LITHIUM BUTTON BATTERY THAT IS SOLDERED IN PLACE. If swallowed, the battery can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children (whether the battery is new or used). If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.



This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.

Do not repair or modify any damaged cable by yourself. Let the authorized service personnel to do it. Improper work will cause an electric shock or a fire.

When moving, consult authorized service personnel for uninstallation and installation of this unit.

Do not touch with wet hands. It may cause an electric shock.

If children may approach the unit, take preventive measures so that they cannot reach the unit.

Do not repair or modify by yourself. It may cause a fault or accident.

Do not use flammable gases near the unit. It may cause a fire from leaking gas.

Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user or damage to property.

Do not set vessels containing a liquid on this unit. Doing so will cause heating, fire or electric shock.

Do not expose this unit directly to water. Doing so will cause trouble, electric shock or heating.


Do not place electrical devices within 1 m (40 in) of this unit. It may cause malfunction or failure.

Do not use fire near this unit or place a heating apparatus nearby. It may cause malfunction.

Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.

Do not insert articles into the slit parts of this unit. Doing so will cause trouble, heating, or electric shock.

■ Name of parts

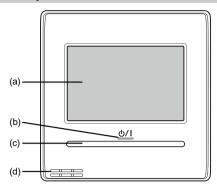


- (a) Touch screen
 - When the screen is touched or the On/Off button is pressed while backlight is set to Enable, backlight lights. Backlight goes off 30 or 60 seconds after the last operation. When backlight is set to Disable, it does not light.
 - Lightly touch the touch screen with your finger tips. A
 commercially available stylus pen can also be used.
 If pushed with too much force or operated with a
 rod, pencil, or ballpoint pen, etc., the screen may be
 scratched or damaged.
 - Do not touch 2 or more places simultaneously. Correct operation cannot be performed.
 - When cleaning, do not use detergent or alcohol, paint thinner, etc. It will cause accidents or loss of appearance.
- (b) Power indicator lamp Lights while the indoor unit is operating. Blinks when an error is detected.
- (c) On/Off button
- (d) Room temperature sensor (inside)

1 MONITOR

1-1 Monitor

1-1-1 Monitor mode screen

Monitor mode screen is the home screen of this unit.

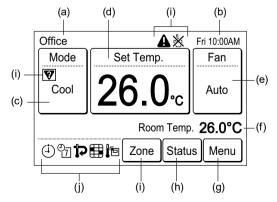

- (a) R.C. group name: Name of the remote controller group to which this unit is connected.
- (b) Clock
- (c) Mode:

When this is touched, the display switches to the "Mode"

screen. Refer to [2 CONTROL] \rightarrow [2-2 Operation Settings] \rightarrow [2-2-1 Set the Operation Model.

(d) Set temp.:

When this is touched, the display switches to the temperature setting screen. Refer to [2 CONTROL] \rightarrow [2-2 Operation Settings] \rightarrow [2-2-2 Set the Temperature].

When the operation mode is set to [Custom Auto], the set temperature is displayed for cooling and heating.

Set Temp.		
Cool	28.0°C	
Heat	20.0°C	
l		

(e) Fan:

When this is touched, the display switches to the fan speed setting screen. Refer to [2 CONTROL] → [2-2 Operation Settings] → [2-2-3 Set the Fan Speed].

(f) Room temp.:

The ambient temperature sensed by this unit is displayed.

(g) Menu:

When this is touched, the display switches to the "Menu" screen. Refer to [3 SETTING].

- (h) Status (for administrator)
- (i) Zone:

When this is touched, the display switches to the "Zone" screen. Refer to [2-3 Zone Operation].
*If not connected to the zone interface, this item is not displayed on the monitor mode screen.


- (j) Status icons:
 - An error occurred. (for administrator)
 - Operation from this unit is prohibited by the Central Controller. (for administrator)
 - Mode mismatch. The mode which cannot operate simultaneously is selected. (for administrator)
 - (4) The On Timer, Off Timer, or Auto Off Timer is set. Refer to [3 SETTING] → [3-4 Timer Setting].
 - † The weekly timer is set. (for administrator)
 - The set temperature automatic return setting is set. (for administrator)
 - It shows that it is time to clean the filter. (for administrator)
 - The temperature sensor of this unit is used. (for administrator)

For the screen display, this product uses a Bitmap font made and developed by Ricoh Company, Ltd.

2 CONTROL

2-1 On and Off

(1) Press the [On/Off] button.

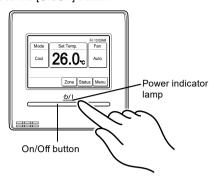

The Power indicator lamp remains lit while the indoor unit is operating.

NOTE

The On/OFF button cannot be operated at screens other than the monitor mode screen.

2-2 Operation Settings

2-2-1 Set the Operation Mode

- (1) Touch the [Mode] on the monitor mode screen.
- (2) "Mode" screen is displayed. Select the operation mode.

(1)



(2)



Depending on the model of the indoor unit, [Custom Auto] is displayed instead of [Auto].



NOTES

- Only selectable modes are displayed. The selectable modes may be different depending on the system configuration and operation status. Refer to [4-1 Selectable modes] in the operation manual on the web.
- When the "Fan" is selected, the temperature cannot be set.



- [Auto] or [Custom Auto] mode can be used in the R.C. Group to which Master Indoor Unit is set. It is not displayed at other R.C. Group.
- When the operation mode is switched in a heat recovery system, operation preparations may take some time, but this is not a malfunction.
- (3) When the [OK] is touched, the display returns to the monitor mode screen.

2-2-2 Set the Temperature

- (1) Touch the [Set Temp.] on the monitor mode screen.
- (2) "Set Temp." scree ▲ s displayed. Adjust the room temperature with the [] or [▼].

(1)



(2)



When the operation mode is set to [Custom Auto], set the cooling and heating temperature.



NOTES

- The settable temperature range is different depending on the operation mode. Refer to [4-3 Selectable Temperature Range] in the operation manual on the web.
- When the "Set Temp. Range Setting" is set, the selectable temperature conforms to the setting. Refer to [3-6-3 Set Temp. Range Setting] in the operation manual on the web.
- (3) When the [OK] is touched, the display returns to the monitor mode screen.


2-2-3 Set the Fan Speed

- (1) Touch the [Fan] on the monitor mode screen.
- (2) "Fan" screen is displayed. Select the fan speed with the [▲] or [▼].

(1)



(2)

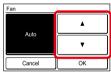

(3) When the [OK] is touched, the display returns to the monitor mode screen.


2-3 Zone Operation

2-3-1 Zone Select

Touch the [Zone] on the monitor mode screen.



The "Zone Select" screen is displayed.

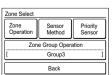


NOTES


- If not connected to the zone interface, this item is not displayed on the monitor mode screen.
- This item is controllable only when the air conditioner is operating.

2-3-2 Zone Individual Operation

(1) Touch the [Zone Operation] on the "Zone Select" screen.

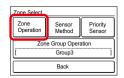

(2) "Zone Operation" screen is displayed. Touch the zone to toggle its outlet opening and closing.

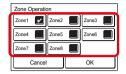

The outlet of the zone with a check mark opens.

NOTES


- Zones that can be configured for outlet opening and closing are displayed.
- When all zone outlets close, the following screen is displayed.




(3) Touch the [OK] on the "Zone Operation" screen to submit the data to the zone interface, and return to the "Zone Select" screen.

2-3-3 Set the Sensor Method

 Touch the [Sensor Method] on the "Zone Select" screen.

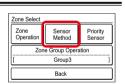


(2) "Sensor Method" screen is displayed. Touch the [Primary Sensor Control] or [Average Temperature Control].

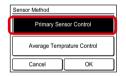

(3) Touch the [OK] on the "Sensor Method" screen to submit the data to the zone interface, and return to the "Zone Select" screen.

2-3-4 Set the Priority Sensor

Touch the [Priority Sensor] on the "Zone Select" screen.

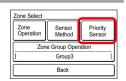

(2) The "Priority Sensor" screen is displayed. This screen contains up to 4 pages. Touch the [Next Page] or [Previous Page] to navigate pages. Touch the sensor to configure.




(3) Touch [OK] to submit the data to the zone interface, and return to the "Zone Select" screen.


2-3-5 Zone Group Operation

Zones registered to a group can be operated in bulk.

(1) Touch the [Zone Group Operation] on the "Zone Select" screen.

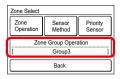

(2) The "Zone Group Operation" screen is displayed. This screen contains up to 2 pages. Touch the [Next Page] or [Previous Page] to navigate pages. Touch the group to operate, and touch the [Enable].

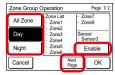


(3) Touch the [OK] on the "Zone Group Operation" screen to submit the data to the zone interface, and return to the "Zone Select" screen.


3 SETTING

3-1 Select the Setting Items

(1) Touch the [Menu] on the monitor mode screen.

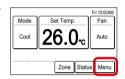

(2) "Main Menu" screen is displayed. The screen has 3 pages which are switched by touching the [Next Page] or [Previous Page]. (Items that indoor unit does not support are not displayed.)

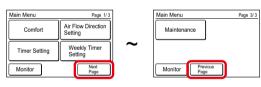

When the item to be set is touched, each setting screen is displayed. Refer to the description of each item for details. When each setting is complete or canceled, the display returns to this screen. When [Monitor] is touched, the display returns to the monitor mode screen.

3-2 Comfort

Air flow direction (up/down or left/right) is set to provide air conditioning for the entire room.

In the comfortable air flow mode, the air flow direction cannot be manually set because the air flow direction is fixed.


(1) Touch the [Comfort] on the "Main Menu" screen.



NOTE

For the indoor units without comfort function, [Comfort] is not displayed.

(2) "Comfort" screen is displayed. Touch the [On] or [Off] on the "Comfort" screen.

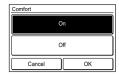

When you touch the [OK], the data is transmitted to the indoor unit, and then the display returns to "Main Menu" screen.

3-3 Air Flow Direction Setting


(1) Touch the [Air Flow Direction Setting] on the "Main Menu" screen



NOTE


For the indoor units without air flow direction adjustment function, [Air Flow Direction Setting] is not displayed.

(2) "Air Flow Direction Setting" screen is displayed. When the [VT Setting] (up/down airflow) or [HZ Setting] (left/right airflow) is touched, each setting screen is displayed.

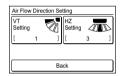

When the indoor unit does not have a left/right air flow direction adjustment function, [HZ Setting] is not displayed and the air flow direction cannot be set.

When this remote controller is connected to the cassette type indoor unit with individual air flow control function, [Individual Hold] is displayed.

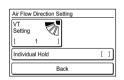

For this operation, refer to [3-3-3 Individual Hold] in the operation manual on the web.

When the [OK] or [Cancel] is touched at each setting screen, the display returns to this screen. When [Back] is touched, the display returns to the "Main Menu" screen.

NOTE

- When using this unit together with a wireless remote controller, the air flow direction of the indoor unit may not match the direction indicated on this unit.
- When the airflow direction is set with combination use of wireless remote controller and this product, airflow direction setting shown on this product may differ from actual louver position of the indoor unit.
- When the airflow direction is set with combination use
 of wireless remote controller and this product in the
 same remote controller group, airflow direction setting
 shown on this product may differ from actual louver
 position of the indoor unit.

3-3-1 VT (Up/down) Air Flow Direction


- Touch the [VT Setting] on the "Air Flow Direction Setting" screen.
- (2) "VT Air Flow Direction Setting" screen is displayed. Touch [▲] or [▼] and set the air flow direction or "Swing".

Air Flow Direction Setting

VT
Setting

1


Back

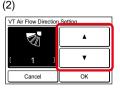


(3) When the [OK] is touched after setting, the data is transmitted to the indoor unit and the display returns to the "Air Flow Direction Setting" screen.

3-3-2 HZ (Left/right) Air Flow Direction

- Touch the [HZ Setting] on the "Air Flow Direction Setting" screen.
- (2) "HZ Air Flow Direction Setting" screen is displayed. Touch [◄] or [▶] and set the air flow direction or "Swing".

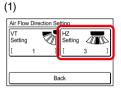

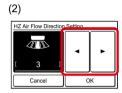

(3) When the [OK] is touched, after the data is transmitted to the indoor unit, the display returns to the "Air Flow Direction Setting" screen.

3-4 Timer Setting

- (1) Touch the [Timer Setting] on the "Main Menu" screen.
- (2) "Timer Setting" screen is displayed.





The following timer settings are possible:

• On Timer:

The stopped indoor unit starts to operate after the set time.

• Off Timer:

The operating indoor unit stops to operate after the set time.


· Auto Off Timer:

When indoor unit operation is started by the On/Off button of this unit, operation stops after the set time.

When the item to be set is touched, the display switches to each setting screen. When each setting is complete or canceled, the display returns to this screen. When [Back] is touched, the display returns to the "Main Menu" screen.

3-4-1 On Timer


 Touch the [On Timer] on the "Timer Setting" screen. When the "Password Verification" screen is displayed, enter the password and touch [OK].

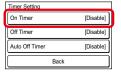

Enable the On Timer.

- "On Timer" screen is displayed. Touch the [Enable/Disablel on the "On Timer" screen.
- "Enable/Disable" screen is displayed. Touch the [Enable].




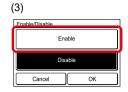

When the [OK] is touched, the display returns to the "On Timer" screen.

Set the Operation Start Time

- (4) Touch the [Operation Start time] on the "On Timer" screen. "Operation Start time" screen is displayed.
- (5) Set the time by touching $[\blacktriangle]$ or $[\blacktriangledown]$.

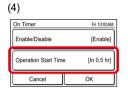



When the [OK] is touched, the display returns to the "On Timer" screen.

NOTE

Up to 24 hours can be set.

Apply the setting.

(6) Touch the [OK] on the "On Timer" screen. After the setting change screen is displayed. the display returns to the "Timer Setting" screen.




3-4-2 Off Timer

Touch the [Off Timer] on the (1) "Timer Setting" screen. When the "Password Verification" screen is displayed, enter the password and touch [OK].



Enable the Off Timer.

- "Off Timer" screen is displayed. Touch the [Enable/Disable].
- "Enable/Disable" screen is displayed. Touch the [Enable].

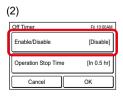




When the [OK] is touched, the display returns to the "Off Timer" screen.

Set the Operation Stop Time

- Touch the [Operation Stop time] on the "Off Timer" screen. "Operation Stop Time" screen is displayed.
- Set the time by touching $[\blacktriangle]$ or $[\blacktriangledown]$.

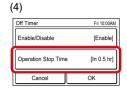



When [OK] is touched, the display returns to the "Off Timer" screen.

NOTE

Up to 24 hours can be set.


Apply the setting.

(6) Touch the [OK] on the "Off Timer" screen. After the setting change screen is displayed, the display returns to the "Timer Setting" screen.



3-4-3 Auto Off Timer

Touch the [Auto Off Timer] on the "Timer Setting" screen. When the "Password Verification" screen is displayed, enter the password and touch [OK].

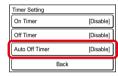


Enable the Auto Off Timer.

- "Auto Off Timer" screen is displayed. Touch the [Enable/ Disable] on the "Auto Off Timer" screen.
- "Enable/Disable" screen is displayed. Touch the [Enable].

(2)



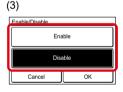

When the [OK] is touched, the display returns to the "Auto Off Timer" screen.

Set the Operation Stop Time

- (4) Touch the [Operation Stop time] on the "Auto Off Timer" screen.
- The "Operation Stop" time screen is displayed. Set the time with $[\blacktriangle]$ or $[\blacktriangledown]$. The time can be set within the 30 to 240 min. range in 10 min. increments.

(4)





When the [OK] is touched, the display returns to the "Auto Off Timer" screen.

Set the time range of Auto Off Timer

- (6) Touch the [Time Range Setting] on the "Auto Off Timer" screen.
- (7) "Time Range Setting" screen is displayed. Touch the [Time Range].






(8) "Time Range" is displayed. When specifying a time range for the "Auto Off Timer", touch [Range Spec.] and when enabling the setting all day, touch [Continuous].



When the [OK] is touched, the display returns to the "Time Range Setting" screen. When the [Continuous] is selected, go to (14).

- (9) Touch the [Start Time] on the "Time Range Setting" screen.
- (10) "Start Time" screen is displayed. Set the Start Time by touching [▲] or [▼] on the "Start Time" screen.

ОК

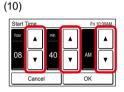


When the [OK] is touched, the display returns to the "Time Range Setting" screen.


NOTE

Setting screen format corresponds to the preference of the "Display format Setting".

- (11) Touch the [End Time] on the "Time Range Setting" screen.
- (12) "End Time" screen is displayed. Set the End Time by touching [▲] or [▼].

(11)

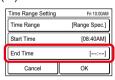

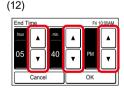

When the [OK] is touched, the display returns to the "Time Range Setting" screen.

(13) Touch the [OK] on the "Time Range Setting" screen. The display returns to the "Auto Off Timer" screen.



Apply the setting.

(14) Touch the [OK] on the "Auto Off Timer" screen. After the setting change screen is displayed, the display returns to the "Timer Setting" screen.




3-5 Special Setting

 Touch the [Special Setting] on the "Main Menu" screen.



(2) "Special Setting" screen is displayed. When the screen has multiple pages, they can be switched by touching the [Next Page] or [Previous Page].



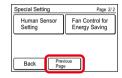

The following contents are set:

(*: Items that indoor unit does not support are not displayed.)

· Economy:

The temperature setting is offset automatically over a certain period of time. The power consumption is suppressed by setting the temperature high during cooling and low during heating.


- Set Temp. Auto Return (for administrator)
- · Set Temp. Range Setting (for administrator)
- · Anti Freeze* (for administrator)
- Human Sensor Setting* (for administrator)
- Fan Control for Energy Saving* (for administrator)


When the item to be set is touched, the display switches to each setting screen. When each setting is complete or canceled, the display returns to this screen. When [Back] is touched, the display returns to the "Main Menu" screen.

3-5-1 Economy

On/Off of Economy

- (1) Touch the [Economy] on the "Special Setting" screen.
- (2) "Economy" screen is displayed. Touch the [On] or [Off] on the "Economy" screen.

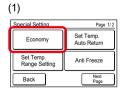

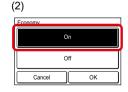

When you touch the [OK], the data is transmitted to the indoor unit, and then the display returns to "Special Setting" screen.